

KD Pocket Door Frame


(Can be used for Residential)

for 1" to 1 3/8" Thick Door - 2" x 4" Stud Wall

(For 1 3/4" use KD134KIT) (For Joining 2 doors use 751 Mullion Connector)

Commercial Grade Pocket Frame Instructions


1

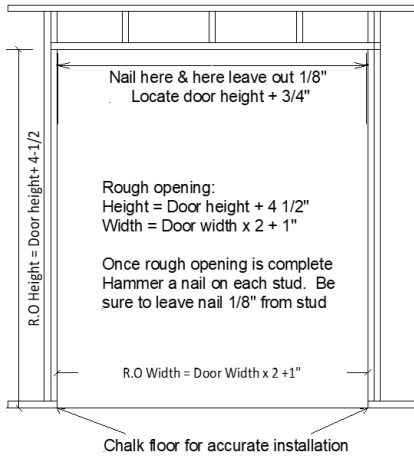

Header must be Level and studs should be Plumb. Hammer a nail (leave 1/8" sticking out) on centerline of each stud. Pocket Header will rest on these.


Chalk floor even with Studs

2

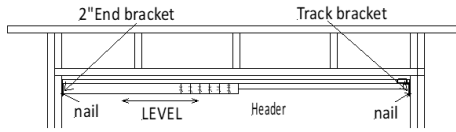

Slide the slot on the Header End bracket and Track bracket over the nails set from step 1

Pocket Door Accessories

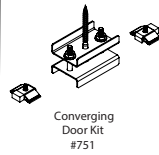


Converging Door Kit #751



13/4" Adaptor Kit KD134KIT


3

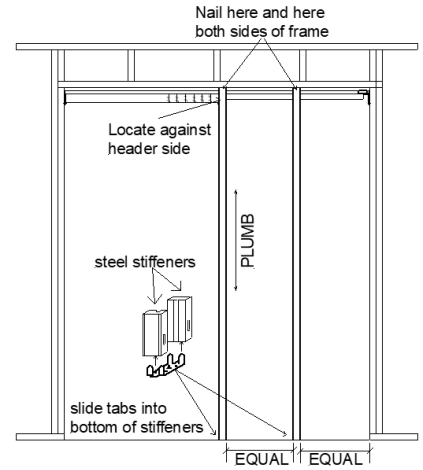

Insert floor bracket into bottom of steel stiffeners, see above. Butt stiffeners to header nailing strip, then nail into place (Wood side of stiffeners facing out)


Attaching Door & Hardware (door by others)

4

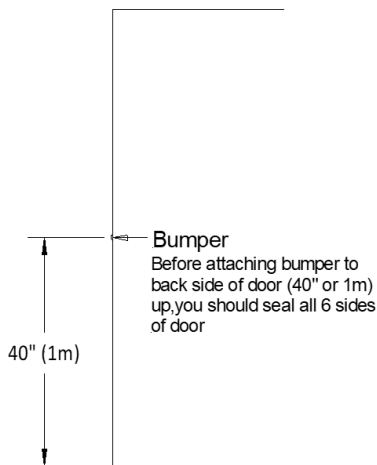


Bumper
Before attaching bumper to back side of door (40" or 1m) up, you should seal all 6 sides of door

5

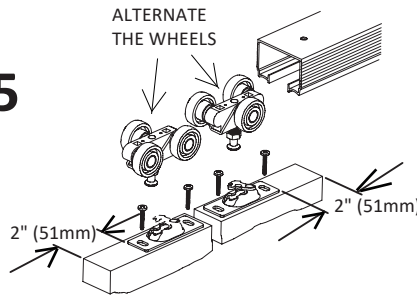

Attach door plates 2" from each edge on top of door with the lock tabs on the same side. Alternate wheels in track. Lift door onto bolts, then lock the tab in place.

6

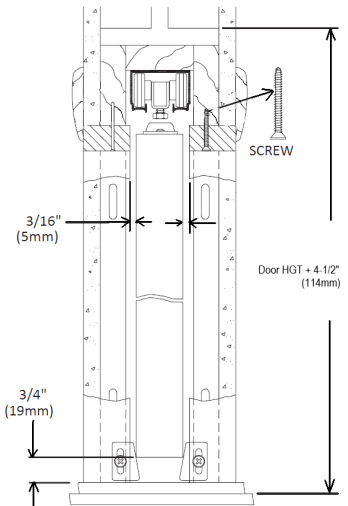

Mount split guides to finish vertical stops so that door is centered and not binding

Cutting Instructions for Pocket Door Frame Header

Cutting Instructions for pocket door frame header: The head is stamped for cutting to shorter lengths. Cutting instructions are below.

To assure accuracy, use a tape measure

2/10 = 34" (86cm) 2/8 = 32" (81cm) 2/6 = 30" (76cm) 2/4 = 28" (71cm) 2/2 = 26" (66cm) 2/0 = 24" (61cm)

A

Remove Adjustable end bracket.



B

Cut through WOOD part of header only, on proper door size mark.



C

Turn Header on side and cut 3/4" (19mm) Head Trim Board ONLY at proper mark. Remove cut off end and discard.




D

Turn Header over and cut Track 1-1/4" (32MM) shorter than wood header

E

Replace Adjustable End Bracket on new cut end of header.

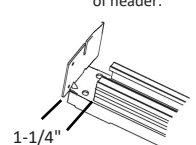

DO NOT CUT THRU TRACK!

cut track 1-1/4 shorter than wood header

1-1/4"

Marco para puerta empotrada KD

(Apto para uso residencial)


para puerta de 1" a 1 3/8" de espesor - pared de entramado de 2" x 4"

(Para 1 3/4" utilice KD134KIT) (Para unir 2 puertas, utilice el conector

de parteluces 751)

Instrucciones para marco empotrado de calidad comercial


1

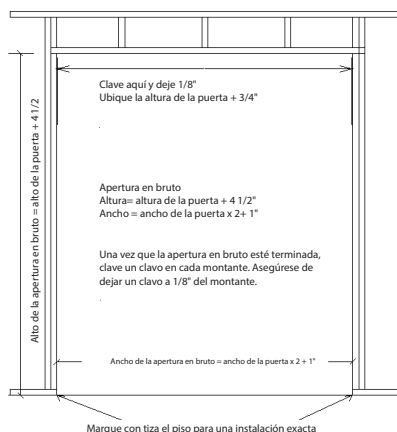

El cabezal debe estar nivelado y los montantes deben estar a plomo. Clave un clavo (deje 1/8" hacia fuera) en la línea central de cada montante. El cabezal empotrado se apoyará en los mismos.


Marque con tiza el piso a nivel con los montantes.

2

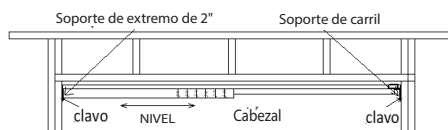


Deslice la ranura en el soporte de extremo de cabezal y el soporte de carril sobre el juego de clavos del paso 1

Accesorios de la puerta empotrada

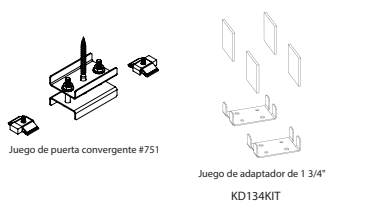


3

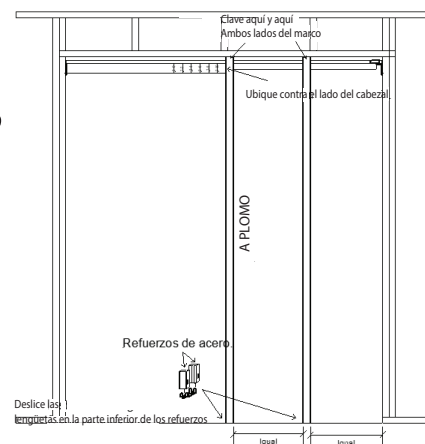


Inserte el soporte del piso en la parte inferior de los refuerzos de acero, consulte más arriba. Una a tope los refuerzos al listón de clavado del cabezal, luego clávelos en su lugar (el lado de madera de los refuerzos hacia fuera).

Cómo colocar la puerta y los herrajes (puerta de otro fabricante)

4

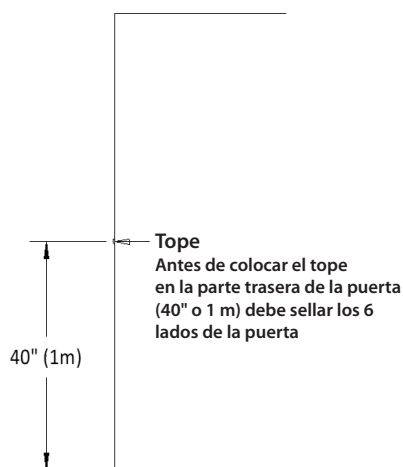


5

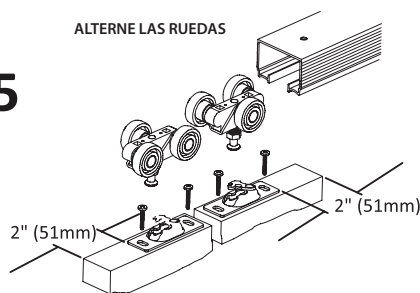

Coloque las placas de la puerta a 2" de cada borde en la parte superior de la puerta con las lengüetas de bloqueo en el mismo lado. Alterné las ruedas en el carril. Levante la puerta hacia los pernos y bloquee las lengüetas en su lugar.

6

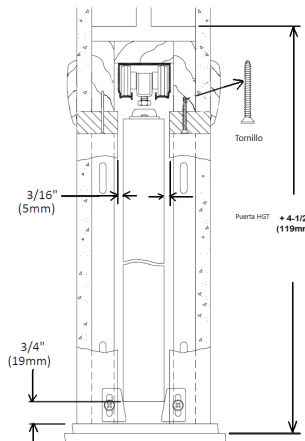

Monte guías de división para completar topes verticales para que la puerta esté centrada y no se trabe.

Instrucciones de corte para cabezal de marco de puerta empotrada

Instrucciones de corte para cabezal de marco de puerta empotrada: El cabezal está marcado para ser cortado para longitudes más cortas. Las instrucciones de corte se encuentran más abajo.

Para garantizar la exactitud, utilice una cinta métrica

2/10 = 34" (86cm) 2/8 = 32" (81cm) 2/6 = 30" (76cm) 2/4 = 28" (71cm) 2/2 = 26" (66cm) 2/0 = 24" (61cm)

A

Retire el soporte de extremo ajustable.



B

Corte únicamente a través de la parte de MADERA del cabezal en la marca de tamaño de puerta adecuada.



C


Gire el cabezal hacia un lado y corte 3/4" (19 mm) de la tabla de corte del cabezal ÚNICAMENTE en la marca adecuada. Retire el extremo cortado y deséchelo.

D

Dé vuelta el cabezal y corte el carril 1-1/4" (32 mm) más corto que el cabezal de madera.

E

Vuelva a colocar el soporte de extremo ajustable en el nuevo extremo de corte del cabezal.

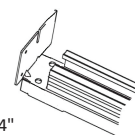

¡NO CORTE A TRAVÉS DEL CARRIL!

Corte el carril 1-1/4" más corto que el cabezal de madera

1-1/4"