


Round PERMACast® Columns

ROUND PERMACAST® COLUMN DIMENSIONS (IN INCHES)*

COL. SIZE	A	B	C	D	E	F	G	J	K	L	O	N	R	T	LENGTHS AVAIL. (ft.)
6"	5 7/8"	4 3/8"	9"	1 1/8"	1 1/8"	3/16"	3/4"	1 1/4"	1 3/8"	8"	1"	6 3/4"	3 1/16"	4 7/16"	4,6,8
8"	7 7/8"	6 1/4"	10 1/2"	1 7/8"	1 3/4"	3/4"	3/4"	1 1/4"	1 1/2"	9 3/4"	1/2"	2 1/4"	4 3/8"	4 1/2"	5,6,8,10,12
10"	9 3/8"	8 1/8"	13 3/8"	2 1/8"	2 1/8"	3/4"	3/4"	1 1/4"	1 1/4"	11 1/4"	3/8"	2 1/4"	5 1/4"	5"	6,8,10,12
12"	11 3/8"	9 3/8"	16 1/2"	2 7/8"	2 7/8"	7/8"	1 1/16"	1 1/4"	2 1/4"	13 3/4"	3/4"	2 5/8"	6 3/8"	5 3/4"	6,8,10,12,14,16,18
14"	13 3/8"	11 3/8"	19 1/2"	3 3/8"	3 3/8"	1 1/8"	7/8"	2"	2 1/8"	17"	7/8"	2 5/8"	7 7/8"	7"	8,9,10,12,14,16,18
16"	15 3/4"	13 3/8"	22 3/8"	4"	3 1/2"	1 1/8"	1"	2 1/4"	3"	19 3/4"	1"	3"	8 3/8"	8"	8,10,12,14,16,18,20
18"	17 1/2"	15 3/8"	24 3/8"	4"	4"	1 1/8"	1 1/8"	2 3/4"	3 3/8"	22 3/8"	1 1/2"	10 3/4"	9 3/8"	8 7/8"	10,12,14,16,18,20,22,24,26
20"	19 1/2"	17 1/16"	27"	4 3/4"	4 1/2"	2"	1 1/16"	2 7/8"	3 3/8"	24 3/16"	1 1/2"	10 3/4"	11 3/4"	9"	10,12,14,16,18,20,22,24
22"	21 3/8"	19 3/4"	30 3/4"	5 3/8"	4 7/8"	2"	1 1/8"	3"	3 3/4"	27 1/2"	1 1/2"	10 3/4"	12 1/4"	10 3/4"	16,18,20,22,24,26
24"	23 3/8"	21 3/4"	33 1/2"	5 7/8"	5 1/4"	2 3/16"	2 3/16"	3 3/2"	4 1/16"	30 1/2"	1 1/2"	10 3/4"	13 3/8"	11 3/8"	12,14,16,18,20,22,24,26,28,30
28"	28"	24 3/8"	38"	6 3/4"	6"	2 3/4"	2 1/2"	3 3/4"	4 3/4"	33 3/8"	1 1/2"	10 3/4"	15 1/2"	11 3/4"	20,22,24,26,28
30"	29 3/8"	26 1/2"	41 1/8"	6 1/2"	5 7/8"	2 1/2"	3 1/16"	4"	4 3/8"	38 3/4"	1 1/2"	10 3/4"	14 7/8"	14 7/8"	20,22,24,26,28,30

*There may be a variance of up to 1/4" in all dimensions. Fluted columns available in all diameters. See page 14 for Parallel dimensions. See page 16 for Ornamental Capital dimensions. Standard Fluted Column (Fluted in mold)

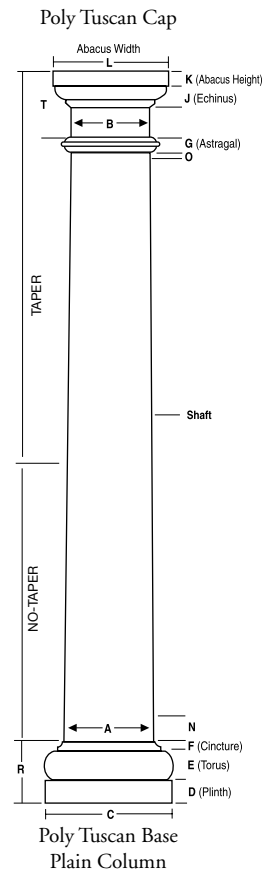

COLUMN-LOC™

Column-Loc™ creates a continuous connection from floor to beam/header without the expense of splitting and reattaching the column. This labor saving product is easy to install and delivers wind uplift resistance especially important in coastal and high wind areas. Currently available for 8 and 10" round (tapered and no-taper) and square PermaCast® columns. Kits are available with and without threaded rod.



ROUND PERMACAST® INSIDE DIMENSIONS

Inside dimension may vary up to 1/8". Splitting a column will decrease inside dimension 1/8".



COLUMN SIZE	TOP I.D.	BOT I.D.
6"	3 7/8"	4 3/8"
8"	5 1/2"	6 3/8"
10"	7 3/8"	8 3/8"
12"	8 3/8"	10 3/8"
14"	10 3/8"	12 3/8"
16"	12 3/8"	15"
18"	14 3/8"	16 3/8"
20"	16 3/8"	19"
22"	18 3/4"	20 3/8"
24"	20 3/4"	22 3/8"
28"	22"	26 1/2"
30"	25 1/4"	28 3/8"

PLUMB-FIT®

To make installation even easier our 6-12" round and square poly Tuscan Cap and Base Sets with flashing cap now come with the Plumb-Fit® installation system included.

SPLIT COLUMN ASSEMBLY KITS (FLANGE KIT)

HB&G offers a split column assembly kit that utilizes a mechanical fastening system for easy and secure assembly. This kit can be purchased separately when ordering a factory split column or they can be ordered pre-installed on factory split columns. This kit is available on select sizes.

